

Room unit Temperature Control

The LCD display shows the actual room temperature in the area

Pressing the left side of the “-/” button to the right of the LCD display will reduce the default

heating and cooling setpoints in increments up to a maximum of 3 degrees

Pressing the right side of the “-/” button to the right of the LCD display will increase the default heating and cooling setpoints in increments up to a maximum of 3 degrees

The display will automatically return to displaying the room temperature after a few seconds.

The default setpoints are **Heating 21°C Cooling 24°C**

“+3” on display will give **Heating 24°C Cooling 27°C**

“-3” on display will give **Heating 18°C Cooling 21°C**

If the room temperature is between the selected heating and cooling setpoints the controller is in its “dead zone” and both heating and cooling will be off.

The five symbols on the LCD display under the room temperature are, from left to right,

System Off - Auto control – Fan Low Speed – Fan Medium Speed - Fan High Speed

To select the function required press the left or right side of the “-/” button under the LCD display.

If “**System Off**” is selected the controls will switch off until the next programmed On period.

If “**Auto**” is selected the controls operate to the selected time clock programme.

If “**Fan Low Speed**”, **Fan Medium Speed**” or “**Fan High Speed**” is selected the fan will run at the selected speed. If the time clock is in an Off period the fan will run for six minutes and then stop. If however the time clock is in an On period the fan will continue to run at the speed selected.